 


USER'S MANUAL

(Electric focusing)

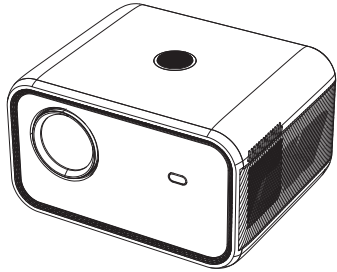

NOTICE Before using the projector, please read this user manual carefully and keep it for future use.

Opening Remarks

Thank you very much for your support!

You can learn to use and operate on this projector by reading this manual.

This handheld projection device has powerful features like compact, convenient etc. It is specifically designed for home, entertainment, business and other application environments. The projector let you enjoy the fun of the big screen reality anytime and anywhere, and you are also welcome to share your fun and opinions with us.

If you have any questions about this product, please contact our after-sales department. we are happy to service for you.

Important safety precautions

For best effects, it is recommended that you use this product in a dark room.

 
 
1. DO NOT install the machine where directly blown by the air conditioner, the water condensed or high temperature may cause machine failure.
2. Make sure that there is sufficient ventilation and the ventilation is not blocked, so as to avoid the accumulation of hot air in the machine
3. Prevent clips or paper falling into the machine, and do not put any metal objects into machine. If accidentally happens, please turn off the power immediately and let qualified personnel fix it.
4. Due to avoid the risk of leakage, do not place any liquid on the machine.
5. When transporting the projector, please use soft packaging materials to protect the lens from scratches Please install the lens protection cover, non violent during transporting.
6. During or after the projection, the vicinity of the exhaust vent will become hot, non touch with your hands.
7. DO NOT look into the lens while the machine is powered on, it may cause serious damage to your eyes.

NOTICE ⚠️
DO NOT open the case. Please entrust qualified professional maintenance personnel to perform maintenance.



⚠️
This mark warns there is an uninsulated voltage in the unit, which may cause electric shock due to the surface magnetic field. It is very dangerous to touch any parts inside the machine.

NOTICE ⚠️
To prevent fire or electric shock, do not expose this machine to rain or moisture.


Safety notice

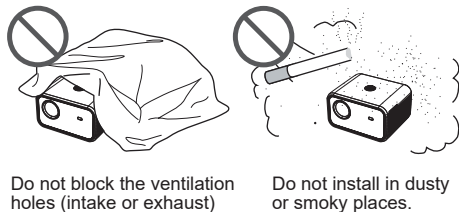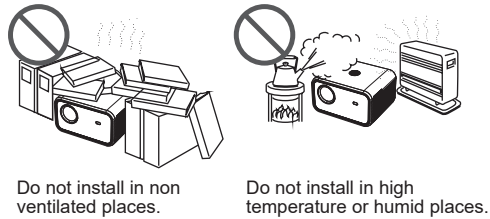


Projector component and functions

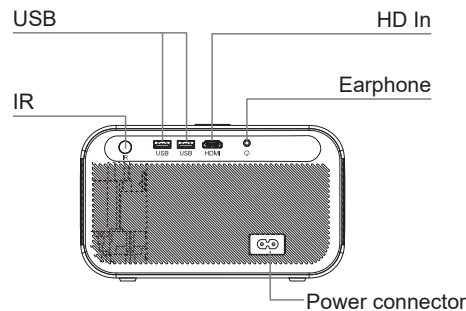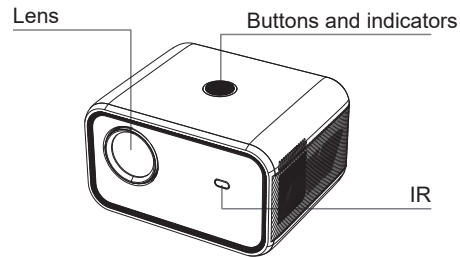  

Projector component and functions

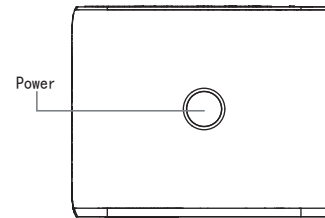 


Remote control button and functions

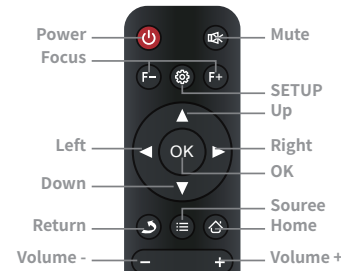 

Installation and Adjusting

1 Projector installation

 You can choose horizontal placement



choose horizontal placement

 
2 Adjust the focus



Focus: When the image is blurred (as shown on the right), adjust the focus ring to obtain a satisfactory image imaging effect. If you cannot obtain satisfactory clarity through adjustment, please move the product forward or backward as appropriate.

Installation and Adjusting

3 Projection Distance Reference

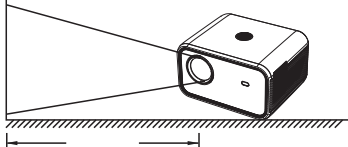


Projection distance

Projection size (inch)	Projection size W*H (m)	Projection distance (m)
36 inch	H0.47m W0.80m	1.1m
56 inch	H0.75m W1.33m	1.7m
66 inch	H0.87m W1.55m	2.0m
86 inch	H1.05m W1.86m	2.5m
96 inch	H1.20m W2.13m	2.8m
116 inch	H1.49m W2.66m	3.4m


4 Safety Power Off

Press the "⏻" button on operation panel or the remote control "⏻", turn off the device according to the system prompts.

 
Put the dust-proof lens cover into the lens and store the device in a dry and cool place.

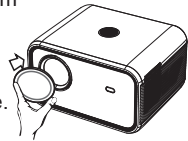

1 Home page

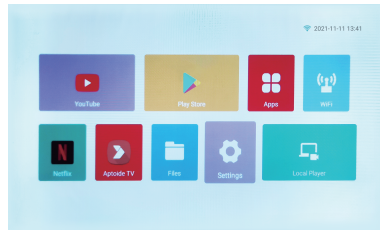 


2 Setting

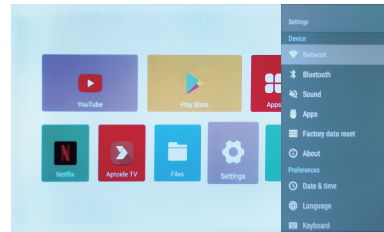 

Due to the continuous improvement of the design, the software interface may be slightly different from the one shown in this figure, please refer to the actual product.


3 WIFI Setting

 Turn on and connect WiFi.

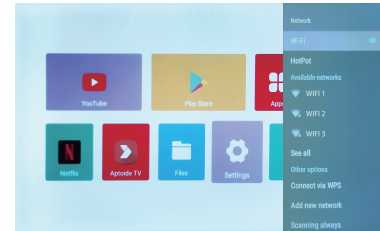

Equipment connection

 Signal flow direction

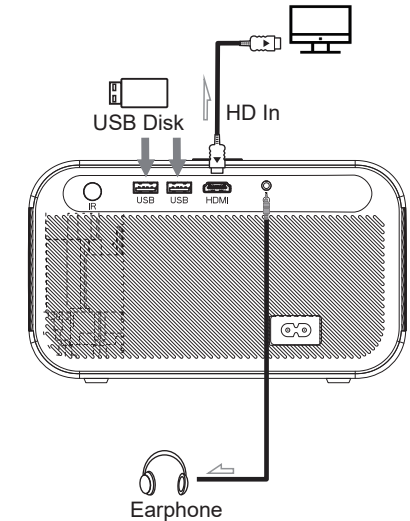

Cleaning Method

Before cleaning, you must make sure that you have unplugged the power plug.

Do not use insecticides or other volatile chemicals on the projector or lens. Do not use rubber or vinyl products to touch the projector. This can damage or cause coating peel off.

Clean the Projector

Wipe with a soft dry cotton cloth. Use a soft cloth dipped in a diluted neutral detergent to wipe it, then with a dry cloth. If you use chemical fiber cloth, please follow the precautions.

Do not use thinner, benzene or other solvents to avoid quality degradation or peeling of the spray coating.

When cleaning the dirt, you can insert a brush in the front of the vacuum cleaner, avoid directly use the vacuum cleaner without any connectors or the nozzle, avoid scratches.

Dust cleaning of lens

Use the same method to clean the camera lens, use the professional hair dryer for the camera or the cleaning paper for the glasses lens. Be careful not to scratch the lens.

Dust cleaning at suction and outlet

The dust in the air inlet and outlet prevents ventilation, which will increase the internal temperature and cause malfunctions. Cleaning guidelines: at least clean once use every 10,000 hours.

Turn off the projector, disconnect the power.

Clean the exterior with an electric vacuum cleaner, and install a brush head adapter on the vacuum cleaner. Please be careful not to use a vacuum cleaner without an adapter or brush head.

Thanks for reading!

Enjoy your time with this projector!